
Rolling Dibbler
Two-Wheel Conversion Kit
Assembly Instructions

7030 E 46th Avenue Dr, Denver, CO 80216, United States
support@hensleyseeds.com | hensleyseeds.com

Included Parts:

A. (1) Rolling Dibbler Wheel
B. (16) Dibbles
C. (1) Clevis Pin
D. (1) Axle for 6” inter-row spacing
E. (1) Axle for 8” inter-row spacing
F. (2) Spacers for 8” inter-row spacing
G. (1) Axle for 10” inter-row spacing
H. (2) Spacers for 10” inter-row spacing
I. (1) Axle for 12” inter-row spacing
J. (2) Spacers for 12” inter-row spacing
K. (1) Accessory Pouch

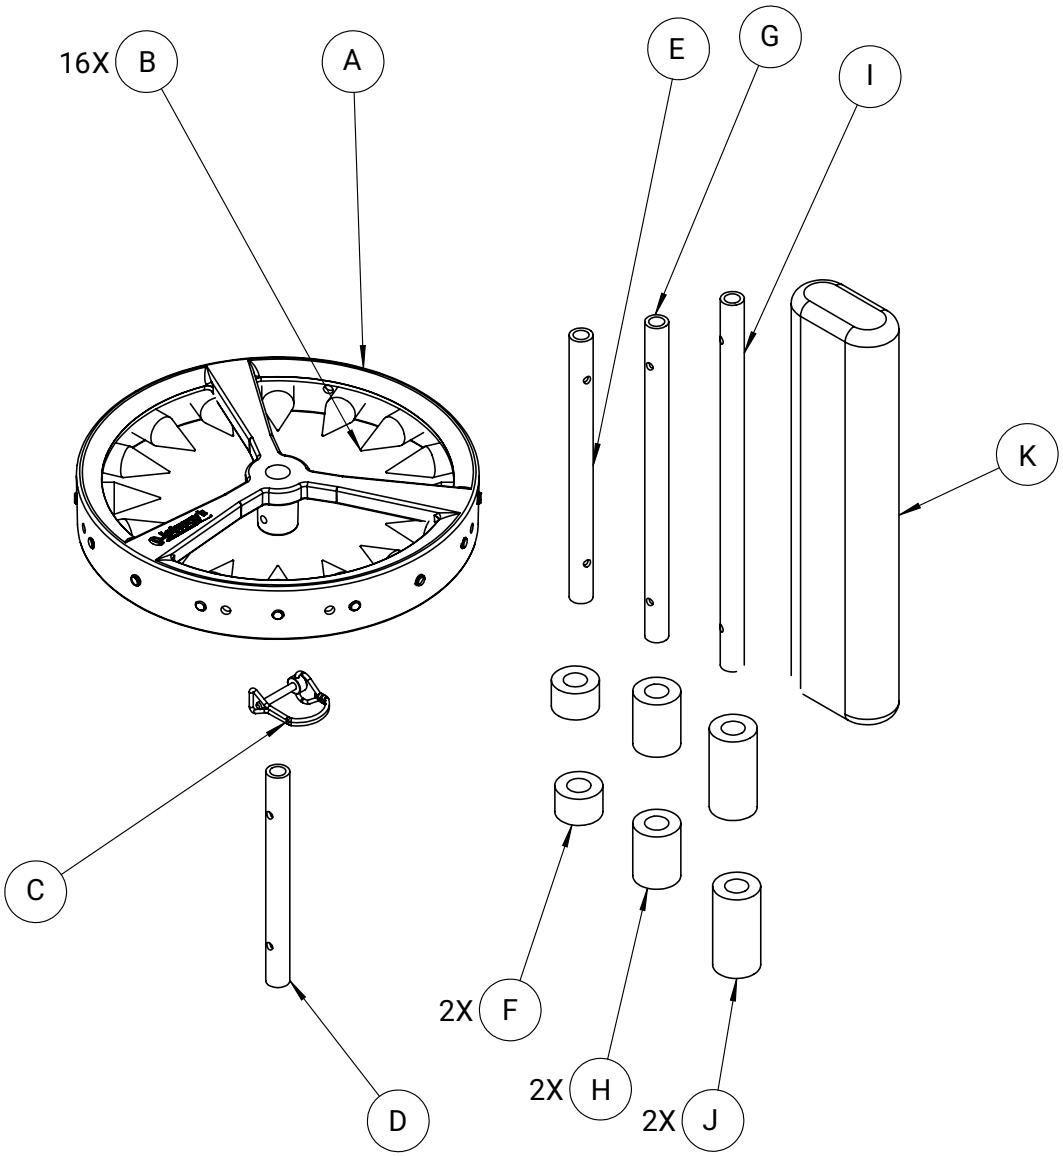


Copyright © 2026 Hensley’s Seed Co. All rights reserved.

The Rolling Dibbler Two-Wheel Conversion Kit turns your Single-Row Rolling Dibbler into a two-wheel version with inter-row spacing of six, eight, ten or twelve inches.

Assembly Instructions:

- Remove the clevis pin from the wheel of your Single Row Rolling Dibbler.
- Slide the axle out of the steel vertical handle.
- Choose your inter-row spacing and select the appropriate parts from the accessory pouch (K):
    - For 6” spacing between rows, use axle (D)
    - For 8” spacing between rows, use axle (E) and spacers (F)
    - For 10” spacing between rows, use axle (G) and spacers (H)
    - For 12” spacing between rows, use axle (I) and spacers (J)
- Return unused axles and spacers to the accessory pouch (K).
- Making sure the bushings are still installed in the steel vertical handle, slide the selected axle through the handle.
- Install spacers if necessary: slide spacers onto the axle, one spacer on either side of the steel vertical handle.
- Install one rolling dibbler wheel to each side of the axle and secure with clevis pins (C).
- Configure the dibbles on each wheel to the desired in-row spacing. See the Single Row Rolling Dibbler instructions for further information on spacing: hensleyseeds.com

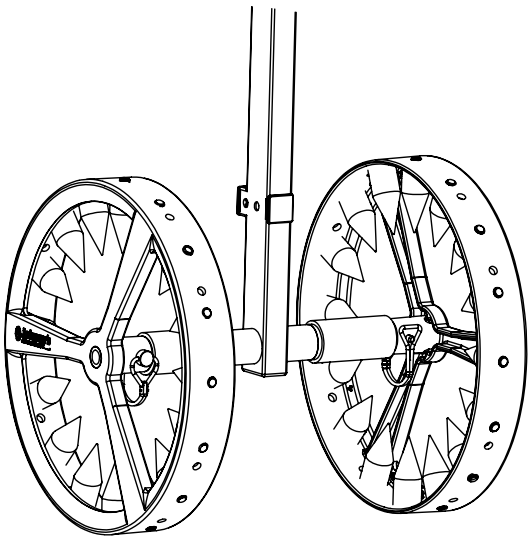

Copyright © 2026 Hensley’s Seed Co. All rights reserved.