Original-source Rolling

Dibbler Wheel

Assembly Instructions


7030 E 46th Avenue Dr, Denver, CO 80216, United States
support@hensleyseeds.com | hensleyseeds.com

The Rolling Dibbler Wheel works with the following products:

- Single-Row Rolling Dibbler
- Infinite Dibbler Frame – 24”
- Infinite Dibbler Frame – 32”
- Infinite Dibbler Frame – 36”
- Two-Person Infinite Dibbler Frame – 36”

Included Parts:

A. (1) Rolling Dibbler Wheel
B. (16) Dibbles
C. (1) Clevis Pin

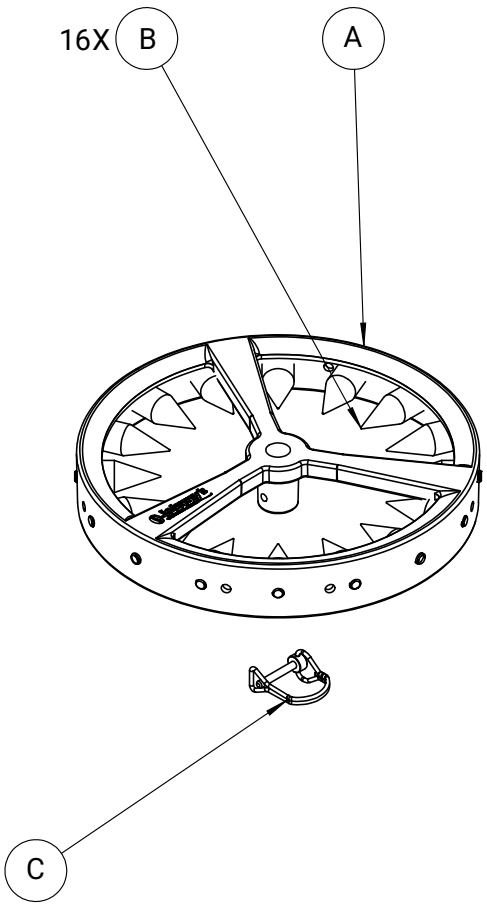

Required Parts

A compatible Infinite Dibbler Retrofit Axle (sold separately) is required for installation onto an Infinite Dibbler Frame.


Length	Dibbler Frame	Retrofit Axle
24”		
32”		
36”		
36”		

Copyright © 2026 Hensley’s Seed Co. All rights reserved.

Installing Dibbles:

The Dibbles (B) are shipped in a stored position. To use, unthread them by hand from the inside of the Rolling Dibble Wheel (A) and reinstall them on the outside in the desired positions, marked with the numbers “3” and “4.” Use the chart below to help guide your placement.

Spacing	Positions
3 inch	All holes marked “3”
4 inch	All holes marked “4”
6 inch	Every other “3”
9 inch	Every other “4”
12 inch	All holes marked both “3” & “4”
16 inch	All holes at a spoke
23 inch	Two dibbles on opposite sides
43 inch	One dibble anywhere

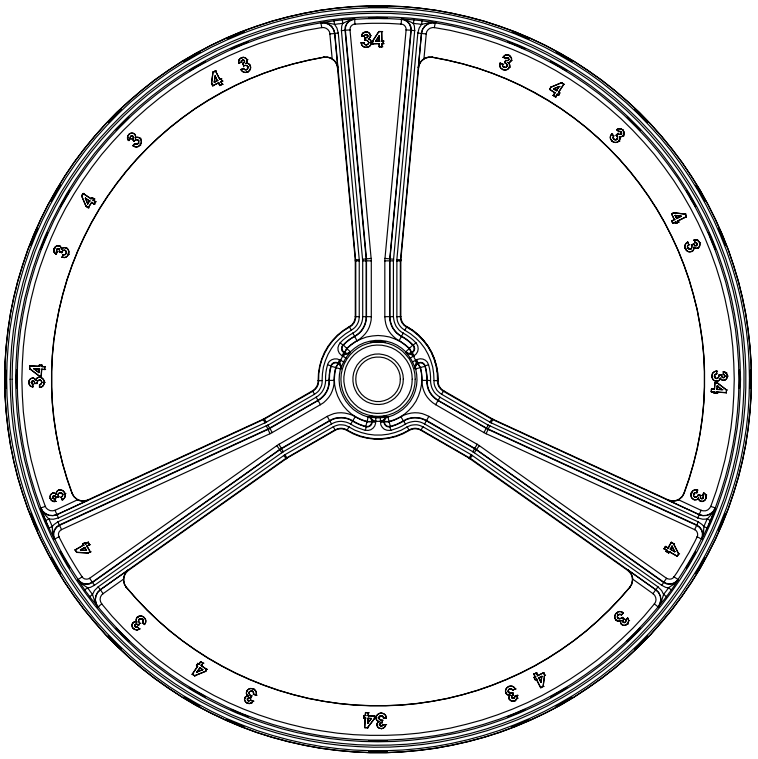
34
3
4
3
4
3
4

Assembly Onto Infinite Dibbler Frame:

1. Remove the axle from the frame by sliding the rubber rings off the axle support pins and removing the pins from the frame.





2. Attach Rolling Dibbler Wheel(s) (A) in the desired location(s) along the Retrofit Axle (sold separately), using a Clevis Pin (C). Holes are spaced at 1” intervals.



Copyright © 2026 Hensley’s Seed Co. All rights reserved.

3. Install the axle onto the frame using the same axle support pins. Move the rubber rings back onto the flat portion of the pin.





4. Once the axle is installed, the Rolling Dibbler Wheel(s) (A) can be moved along the axle. To add or remove wheels, repeat the installation process.



Important Note:

- The Retrofit Axles allow use of Rolling Dibbler Wheels with your existing Two Bad Cats Infinite Dibbler. However, you cannot mix the Two Bad Cats wheels (no longer available) with the Dibbler Wheels. Keep the original axle if you would like to swap between the wheel systems.


Copyright © 2026 Hensley's Seed Co. All rights reserved.

To Install Adjustable Toolbar Dibbles (Sold Separately):

For a larger variety of dibble sizes, the threads on the Rolling Dibbler Wheels are compatible with Adjustable Toolbar Dibbles

.

1. Remove the included dibbles from Rolling Dibbler Wheel .
2. From the inside of the wheel, thread a 3/8”-16 x 1” bolt (not included) through the hole(s) at the desired location(s).
3. Thread the dibble(s) onto the bolt(s).

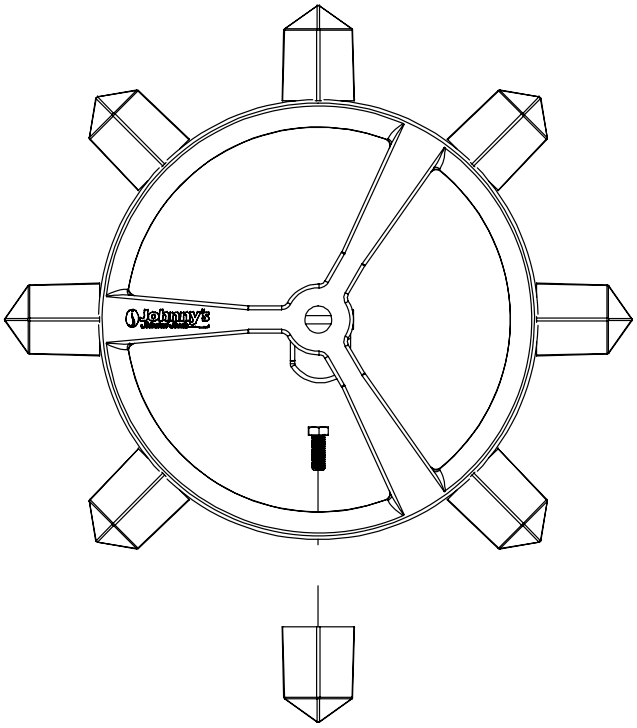

Copyright © 2026 Hensley’s Seed Co. All rights reserved.