# OFFSET WIRE HOE
## ASSEMBLY INSTRUCTIONS

7030 E 46th Avenue Dr, Denver, CO 80216, United States
support@hensleyseeds.com | hensleyseeds.com

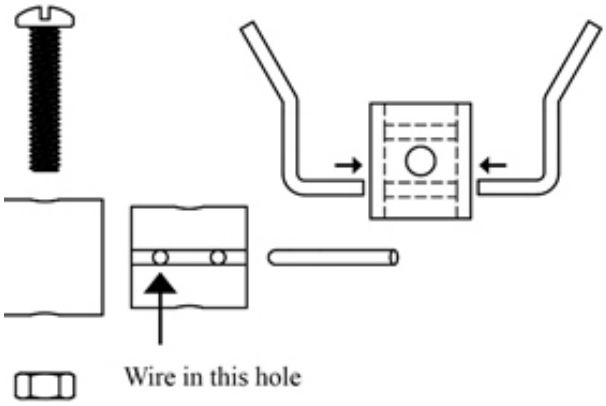
## Installing of Wire



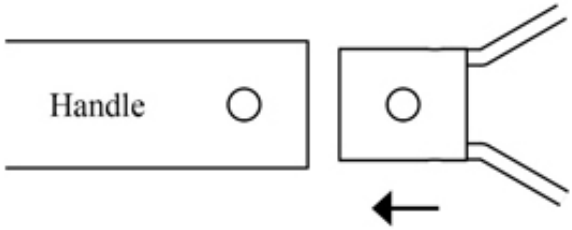

**1.** Remove screw + nut.

**2.** Pull plug out.

**3.** Cut tie wrap.




**4.** Insert wire ends into plug hole where arrow shows.




**5.** Insert plug into handle.

**6.** Insert screw and nut.

**7.** Enjoy your new tool!

© 2020 Hensley's Seed Co. All rights reserved.