
Single Rolling Dibbler
Instructions for Use

8316

7030 E 46th Avenue Dr, Denver, CO 80216, United States
support@hensleyseeds.com | hensleyseeds.com



The Rolling Dibbler is used to make impressions in the soil for more precisely spaced row crops. Straight and even plantings are easier to cultivate and more productive, resulting in less labor and more profit. The dibbles are easily adjustable for several in-row spacing options, and effective for puncturing through plastic mulch.

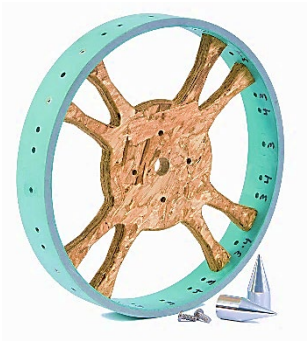


A diversity of in-row spacing options can be achieved by securing the desired dibbles to the outside of the wheel while fastening the spare dibbles facing inward when not in use.

Made in Vermont. Additional Rolling Dibbler models are also available.

PARTS INCLUDED

A. (1) Wooden Dowel Handle
B. (1) Wooden Handle Shaft (axle included)
C. (1) 1/4”-20 x 3” Hex Bolt
D. (1) 1/4” Nylock Nut
E. (2) 1/4” Flat Washers
F. (1) Wheel
G. (1) Cotter Pin
H. (16) Aluminum Dibbles
I. (16) 1/4”-20 x 5/8” Bolts

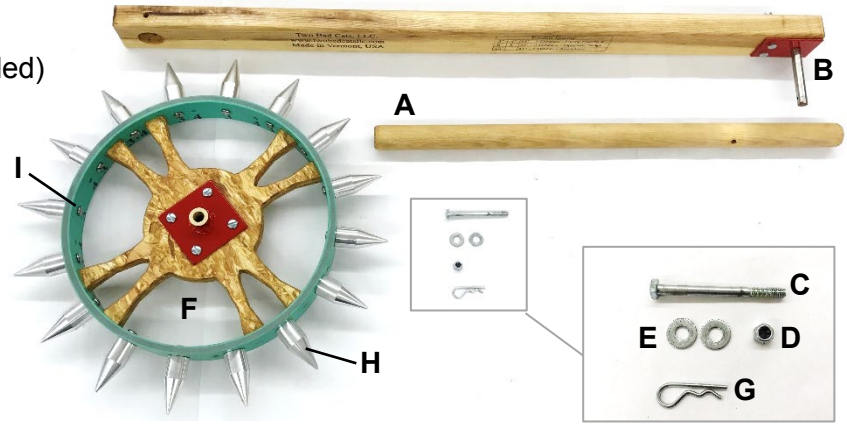

ADDITIONAL TOOLS NEEDED

Set of 7/16” wrenches or sockets
Flat-head screwdriver

ASSEMBLY



1. Insert dowel handle into opening at the top of the handle shaft, lining up the holes.

   ***Note**: The hole in the dowel is located to one side for creating an off-set handle orientation. The short handle end should be protruding from the side of the handle with the Dibbler logo stamped on it.*

2. Insert the hex bolt provided through the holes. Be sure there is a washer on either side of the wood handle before securing the nylock nut. See left.

3. Place the wheel onto the axle at the end of the handle with the metal bracket facing inward (see right) and secure with the cotter pin provided.



Copyright © 2018 Hensley’s Seed Co. All rights reserved.

INSTRUCTIONS FOR USE

Rolling Dibblers can be either pushed or pulled. Make sure the plastic wheel hub sits directly on the soil surface and the metal dibbles fully penetrate the ground.

NOTE: *The spacing accuracy of the dibbles can vary depending upon rolling speed and soil conditions. Always measure the spacing to be sure it is correct before planting your crops. Dibble holes may be difficult to see in dry and sandy soils.*

DIBBLE SPACING

The Dibbler's strong, aluminum alloy wheels can be easily changed out using a flat-head screwdriver. Store dibbles inward on the wheels when not in use. See basic in-row spacing options below.



3" Spacing
All dibbles on the 3 holes



4" Spacing
Dibbles on the 4 holes only




6" Spacing
Dibbles on every other 3 hole



8" Spacing
Dibbles on every other 4 hole




12" Spacing
Dibbles on the 4 "corners"

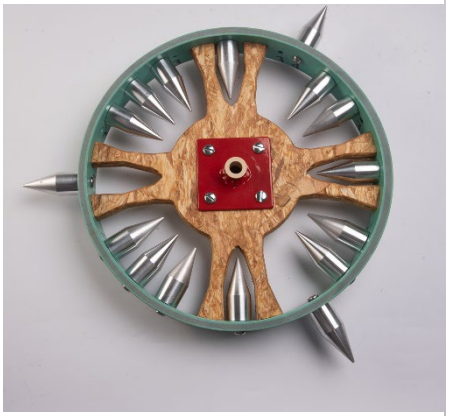

15" Spacing
Dibbles on every 4th 4·3 hole



22" Spacing
2 Dibbles on opposite sides

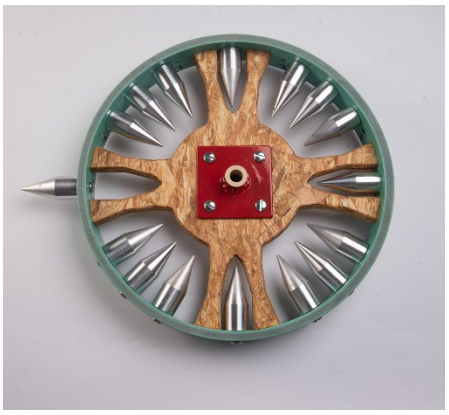

41" Spacing
1 Dibble anywhere

The holes drilled into the plastic wheel hub feature a numbering system for interpreting whether the dibbles are being spaced in 3" or 4" increments.



11/12/2018 JG/ms

Copyright © 2018 Hensley's Seed Co. All rights reserved.